


## GPS instructions

### ***Power the unit***

Press the bottom right button, it takes about 5 seconds before anything appears on the screen.


Once the unit has started up, press the DISP button to cycle through the displays until you see this display:

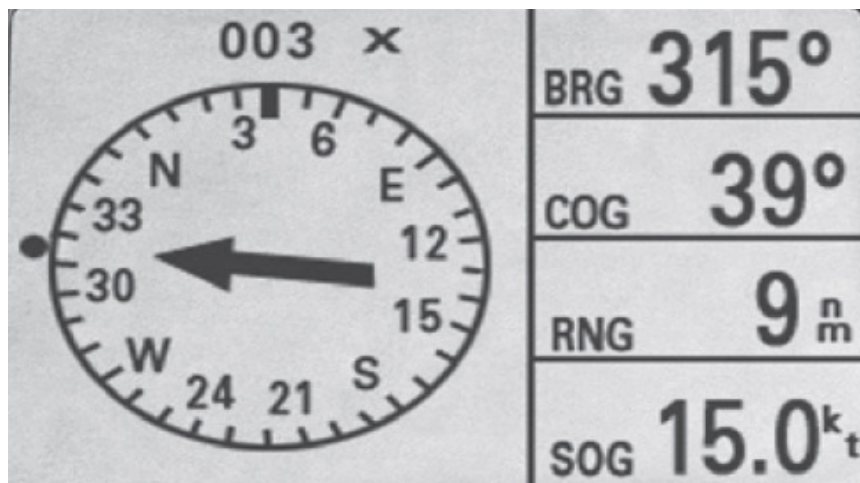

### ***To set a waypoint***


( get the boat next to the mark you want to record first):

- Press the Mark/Mob button – This records the current position
- Note the default number given to the waypoint – This auto increments
- Press the exit button to return to the main display

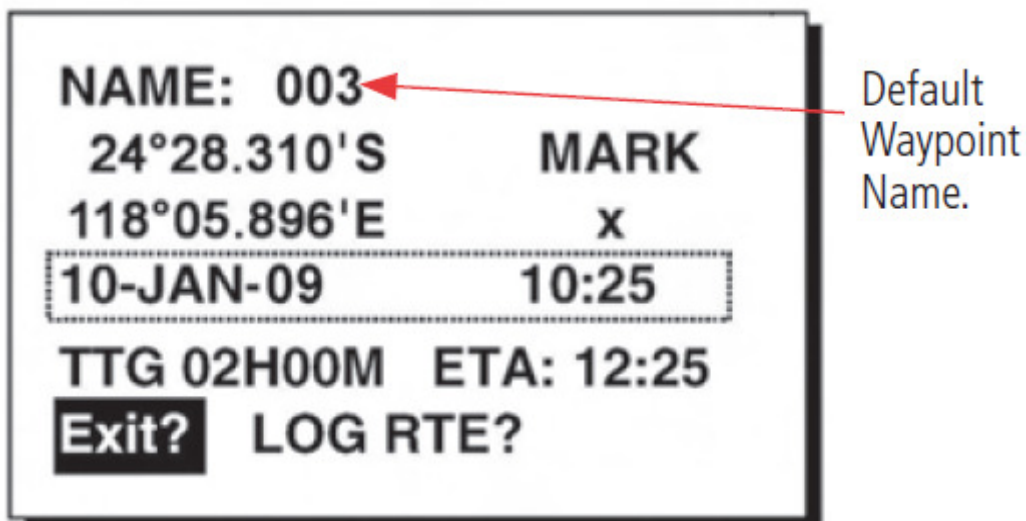


### ***To goto a Waypoint***

Press the Goto button and Enter to select the WPT-LIST

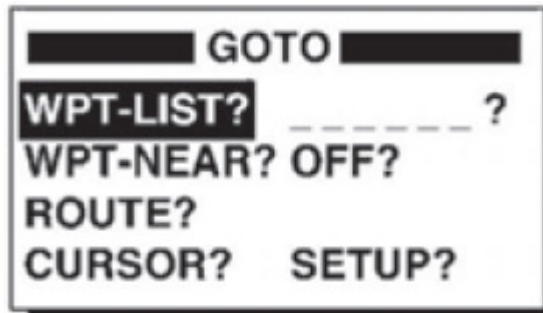


Select the waypoint from the list using the arrow keys and press Enter button

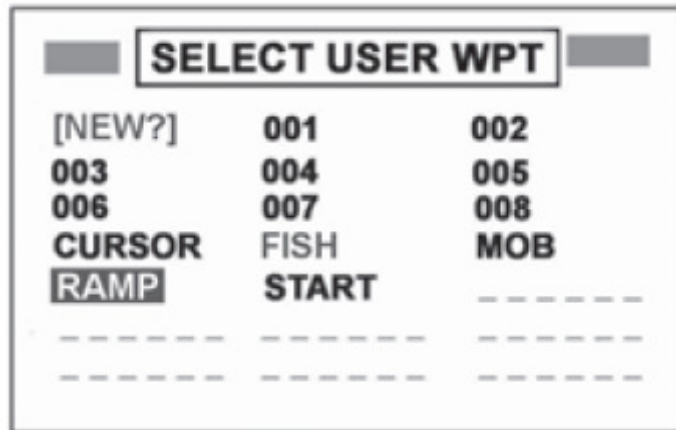

***Erasing Waypoints***

From the main menu press the Erase Button and Enter, you will see the following screen:

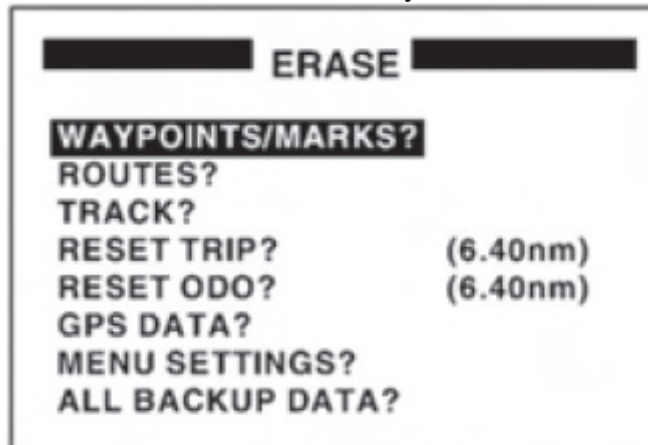

Leave the menu on Waypoints /Marks and press Enter. Select ALL to erase all waypoints or select the individual waypoint to erase:

